



Component overview

Pos.	Designation	Qty
1	Side panel L	1
2	Side panel R	1
3	Corner profile L	1
4	Corner profile R	1
5	Square tube	2
6	Adapter piece	1
7	Mounting bracket for antenna	4
8	TN-UHF-ANT-Q250...	4
9	Mounting plate	1
10	TN-UHF-Q180L300...	1
11	Screw, M10 x 20	12
12	Screw, M10 x 80	4
13	Screw, M5 x 15	4
14	Washer (included in antenna packaging)	8
15	Nut, M10	4
16	Washer, M10	16
17	Nut, M4 (included in antenna packaging)	8
18	Screw, M4	4
19	Washer, M5	8
Other components (included in scope of delivery)		
	RSSD-RJ45S-4422-5M Ethernet cable for connecting the reader	1
	RSC4T-5/TXL supply cable	1
	TN-UHF-CBL-HF240-RPTNC-2-SMA coaxial cable for connecting the antennas	2
	TN-UHF-CBL-HF240-RPTNC-12-SMA coaxial cable for connecting the antennas	2
	230-V power supply	1
Other components (not included in scope of delivery)		
	Screw, M10 x 20, for mounting the gate on supports	8